

The logo consists of a solid olive-green square with a smaller, slightly offset square on top-left, creating a layered effect. The word "HANNspree" is written in white, sans-serif font across the center of the green area.

**HANN**spree

# **HANN**Spad

SN14T7 (HSG1281)

## **User's Manual**

# Contents

<b>Precautions .....</b>	<b>5</b>
<b>What's in the box.....</b>	<b>6</b>
<b>1. Know Your Tablet PC .....</b>	<b>7</b>
1.1 Front View .....	7
1.2 Back View .....	8
<b>2. First Use of Tablet PC .....</b>	<b>9</b>
2.1 Managing and Charging the Battery .....	9
2.2 Turning on/off the Tablet PC .....	9
2.3 Connecting PC and Data Transmission .....	10
2.4 Use Micro SD card .....	10
<b>3. The Home Screen .....</b>	<b>11</b>
3.1 Home Screen .....	11
3.2 Wallpapers.....	11
3.3 Status Bar.....	12
3.4 Using the Touch Screen .....	12
3.5 Application Menu .....	13
<b>4. Basic Settings.....</b>	<b>14</b>
4.1 Wi-Fi and Network.....	14
4.1.1 Wi-Fi .....	14
4.2 Device .....	16
4.2.1 Sound .....	16
4.2.2 Display.....	16
4.2.3 HDMI .....	17
4.2.4 ScreenshotSetting .....	18
4.2.5 Storage .....	18
4.2.6 Battery .....	19
4.2.7 Apps .....	19
4.3 Personal .....	20
4.3.1 Location access.....	20
4.3.2 Security .....	20
4.3.3 Language and input .....	21
4.3.4 Backup & Reset.....	22
4.4 Accounts.....	22
4.4.1 Add account .....	22
4.5 System .....	23
4.5.1 Date and time .....	23
4.5.2 Accessibility .....	24
4.5.3 Developer options.....	25
4.5.4 About Tablet.....	27
<b>5. System Firmware Update .....</b>	<b>28</b>
<b>6. Product Specifications .....</b>	<b>29</b>

<b>7. Troubleshooting .....</b>	<b>30</b>
7.1 Resetting your device to Factory Defaults .....	30
7.2 How to reset the tablet .....	30
7.3 Getting further help and support.....	30

## Control information

This device is in accordance with the requirements in Radio & Telecommunications Terminal Equipment Directive 1995/5/EC.

This device complies with the requirements in EMC Electromagnetic Compatibility Directive 2004/108/EC and Low Voltage Directive 2006/95/EC.

## FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## RF Warning Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The radiated output power of this device is below the FCC radio frequency exposure limits. Nevertheless, the device should be used in such a manner that the potential for human contact is minimized during normal operation.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/Kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. To avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna should be minimized.

## Recycling information

Hannspree attaches great importance to our environmental policy, and firmly believe that we can better protect the "health" of the earth by properly disposing and recycling the industrial technological equipment that has reached service life.

These devices contain recyclable materials, which can be re-added to new material after decomposition. In contract, other materials are classified as dangerous and toxic substances. We sincerely hope that you contact the relevant institutions based on the information we provide to recycle this product.

For more information, please visit:

<http://www.hannspree.com/>

## Preventing Hearing Loss



Caution: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

This device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 and/or EN 50332-2 standards.

The Li-ion battery package in the product is not serviced and replaced.

## Trademark Notice




Hannspree products incorporate High-Definition Multimedia Interface (HDMI™) technology.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

# Precautions

For the correct use and good performance of the device, the user must fully understand the manual as well as strictly follow the instructions provided.

- Please avoid high temperature (over 35°C) or low temperature (below 0°C).
- Never knock the main machine violently.
- Never let the device come in contact with chemicals such as benzene, thinner etc.
- Do not let the device get close to strong magnetic field, electric field etc.
- Keep away from direct sunlight or heating appliances.
- Never privately disassemble, repair or modify the device.
- Using the device and the earpiece during bicycling, car and motorcycle driving is likely to cause danger.
- Never use higher volume, which may damage your hearing ability.
- Divide scraped packing, batteries, old electronic products and dispose them properly.
- Please charge under the following circumstances:
  - A. The battery icon shows no power.
  - B. The system automatically shuts down, and immediately shuts down after a re-start.
  - C. The operating button does not respond.
  - D. The product displays the red icon (  ) on the lower-right corner of the screen.

 
**NOTE:** Pictures in this manual are for reference only.




## **DO NOT throw the battery in municipal waste.**

The symbol of crossed out wheeled bin indicates that the battery should be **NOT** placed in municipal waste.


# What's in the box

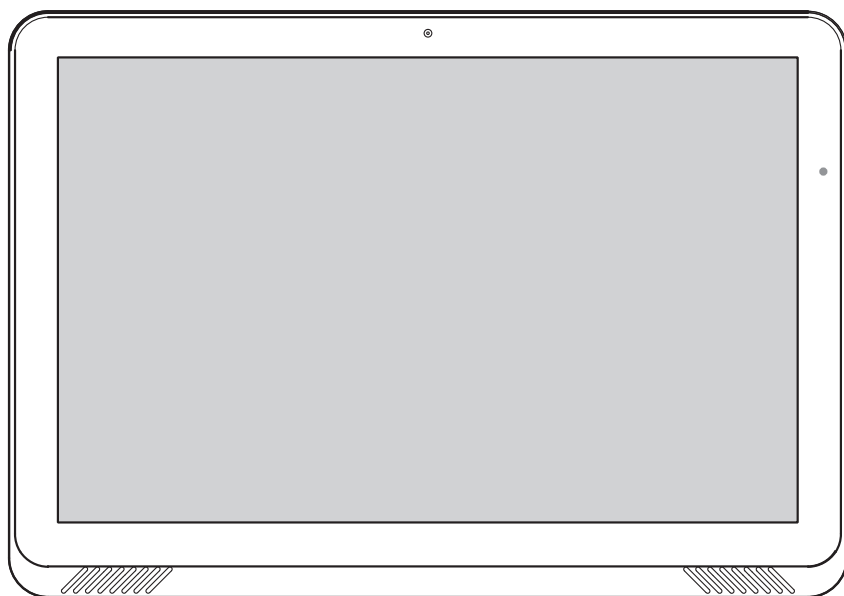

Tablet PC (SN14T7)

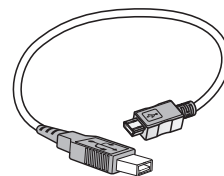 

Micro USB cable

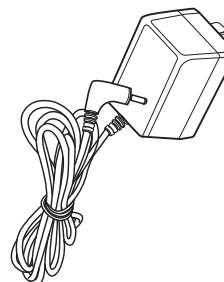 

Power adapter


**NOTE:** The included adapter head may vary depending on the region.

This Quick Start Guide and a Warranty card are also included.

- If any item is damaged or missing, contact your point of purchase for assistance.
- Use only approved accessories.
- Accessories may vary by country or region.

# 1. Know Your Tablet PC

 
## 1.1 Front View

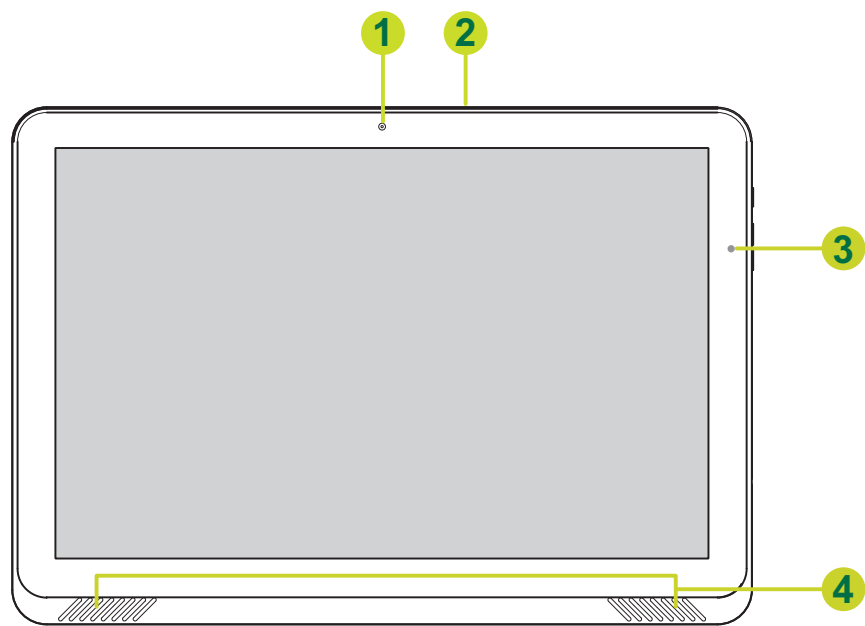

No	Item	Description
1	Front Camera	For video chatting or taking self-portrait pictures.
2	Microphone	For audio input.
3	Status Indicator	Lights blue while charging the battery.
4	Speakers	Emits sound output.



## 1.2 Back View

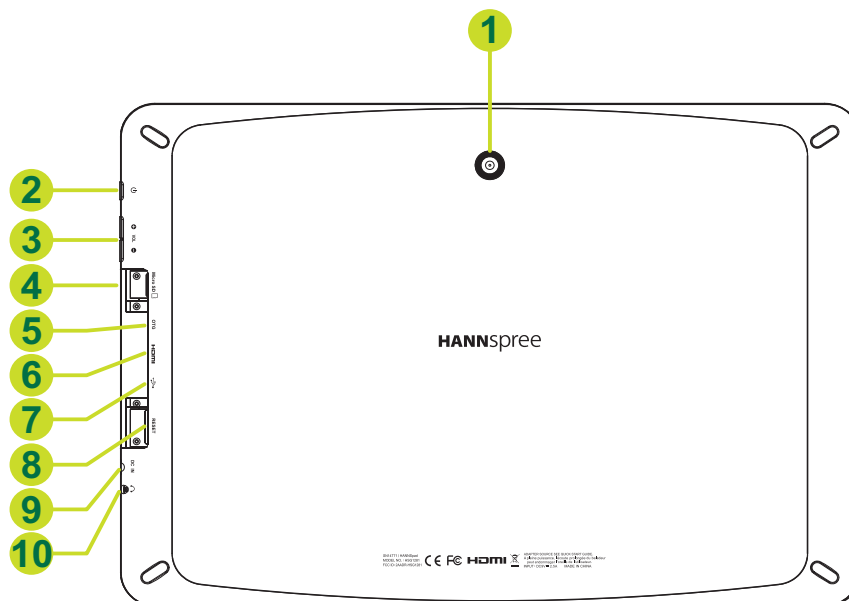 

No	Item	Description
1	Rear Camera	For taking pictures or recording videos.
2	Power Switch	<ul style="list-style-type: none"> <li>Press and hold to turn the device on or off.</li> <li>Press to turn the backlight on / off and put the device into sleep mode.</li> </ul>
3	Volume Adjustment Button	Press to adjust the volume.
4	MicroSD Card Slot	Insert a microSD card for additional storage space.
5	Micro USB Port	Supported USB keyboard, mouse, and USB flash disk. <b>Note:</b> Connects to a PC using the supplied USB cable.
6	Mini HDMI Port	Output images using HDMI cable (sold separately) to an HDMI television or display device.
7	Micro USB Port	Supported USB keyboard, mouse, and USB flash disk.
8	Reset	Insert a pointed object, such as a paper clip, to force the device to turn off its power.
9	Power DC Input	Connects the device to the DC jack to charge the battery.
10	Headphone Jack	Connects to an earphone using a 3.5 mm audio jack.

### NOTE:

#### How to reset the tablet

Unwrap a paper clip and insert the end into the opening for the **Reset** button where it's located on the right side of your tablet's back cover until the screen goes dark. Then press the **Power** button to power on.

 
## 2. First Use of Tablet PC

### 2.1 Managing and Charging the Battery

Before using the tablet PC for the first time, fully charge the battery. This tablet PC has a built-in polymer battery; use only the dedicated charger to charge the device.

In order to prolong the service life of the product's battery, for the first two battery charges we recommend that you use the device until the battery is fully depleted and then charge to full capacity.

To charge the battery, connect the charger / adapter to the device and the DC jack.

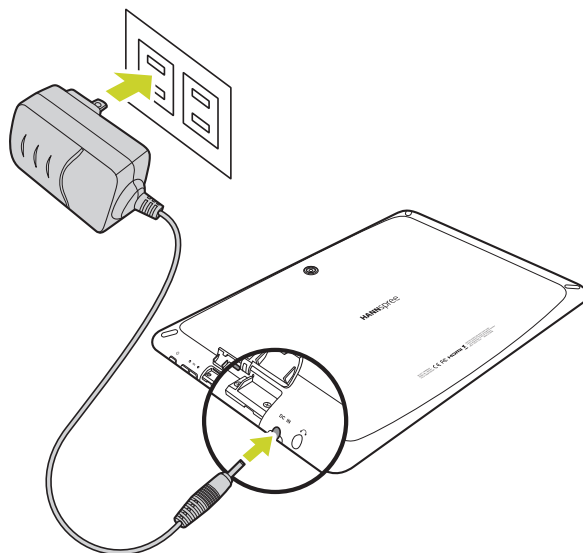

**NOTE:**

- For the first two times of charging the battery, the charging time may take up to 10 hours; succeeding times may take up to 5 hours.
- During charging, the battery icon on the screen will scroll.
- When charging is complete, the battery icon will turn green and stop scrolling.
- When you plug in the charger after the product shuts down due to low power, it may take a while before the product enters the home screen.
- The Li-ion battery cells in the battery pack are not user-serviceable.

When the product is not in use, be sure to turn off the device.

If the device will not be used for a long time, be sure to discharge and then charge the battery once a month.

The built-in polymer battery must be recharged regularly. Battery damage caused by depletion or by the use of an unauthorized charger are not covered by the warranty.



**DO NOT throw the battery in municipal waste.**

The symbol of crossed out wheeled bin indicates that the battery should be **NOT** placed in municipal waste.

### 2.2 Turning on/off the Tablet PC

**Power on:** Press and hold the **Power** button for 2 seconds.

 
**Power off:** Press and hold the **Power** button until the option menu displays.

## 2.3 Connecting PC and Data Transmission

Use the supplied USB cable, connect the device to the PC to transfer data. Enter the USB disk mode to copy and delete files to and from the PC.

When the operation menu appears, click “USB connected”: Click “Turn on USB storage” on the prompting window, then enter the data transmission state.

- At this time, you can locate the tablet storage card and SD card (if the card has been plugged in) in My Computer list.
- After data transmission, click “Turn off USB storage”, and then it will quit the data transmission state.

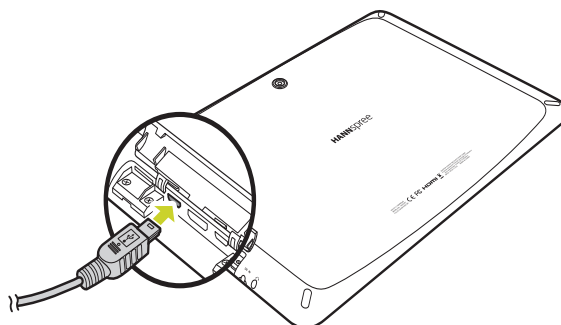

**NOTE:** Before quitting the state of data transmission, if the system of U disk or card is NTFS, please safety remove them from the PC, then click “close USB storage device”, otherwise the file may be missing.

## 2.4 Use Micro SD card

After connecting the device to a PC, you will find two removable disks, the front one is the built-in-memory disk, the other one is the Micro SD card disk. If there is no card plugged in, the second disk cannot be opened. The device supports up to 32GB Micro SD card expansion.

**Plug-in:** face the front side (the side with prints) of the Micro SD card upwards (the direction in which the machine’s display screen faces) and connect it with the machine by plugging it with slight force into the card slot of the machine. Now the machine can play the files stored on the card.



**Plug-out:** push Micro SD card inwards slightly, it will spring back and should be removable without force.

## 3. The Home Screen



### 3.1 Home Screen

After powering on the device, the locked Home screen is displayed.



The screen is locked by default. To unlock the screen, drag  towards .

In the home screen you can manage the application icons:

- **Add application shortcuts:** Long press an application icon from the application menu and then drag the icon to the home screen to add as shortcut.
- **Remove application shortcuts:** Long press an application icon in the home screen, the top of the screen displays . Drag the application icon towards  until it turns red, and then release the touch screen to remove the application shortcut.

### 3.2 Wallpapers

Long press the touch-screen, the Wallpaper option will pop up.







- **Gallery:** Choose a picture saved in your albums or a picture taken by the device camera to use as a background of the home screen.
- **Live Wallpapers:** Choose a moving picture from the live wallpapers to use as the background of the home screen.
- **Wallpapers:** Choose a picture from the default system pictures to use as the background of the home screen.

### 3.3 Status Bar

The status bar is located at the bottom the screen.



The icons are:

- Return : Tap to return to the previous screen.
- Home : Tap to return to the Home screen.
- History : Tap to view the most-recently accessed applications.
- Screen Capture : Tap to capture the snapshot of the current screen. By default, this function is disabled.

The WiFi signal, the WiFi connection status, battery power/battery charging status, current time, USB, SD card connection, and etc. status are displayed on the status bar that appears at the top of the screen.



### 3.4 Using the Touch Screen

The tablet PC is equipped with a 13.3-inch touch screen. The following describes the main touch screen area, and some tips on how to use the touch screen.

Whatever interface you are in, you can return to the home screen directly by touching the Home



icon. Also, touch the History



icon to view the history of recently accessed applications. You can clear the recent applications from the *History* list by dragging the desired the application icon up or down.

In different applications, you can return to the upper layer or previous interface by touching the screen Return



 
icon. In different applications, touch the Advanced



icon to pop up the relevant options available in the application.

### 3.5 Application Menu

Tap the application icon  to view the application menu screen.

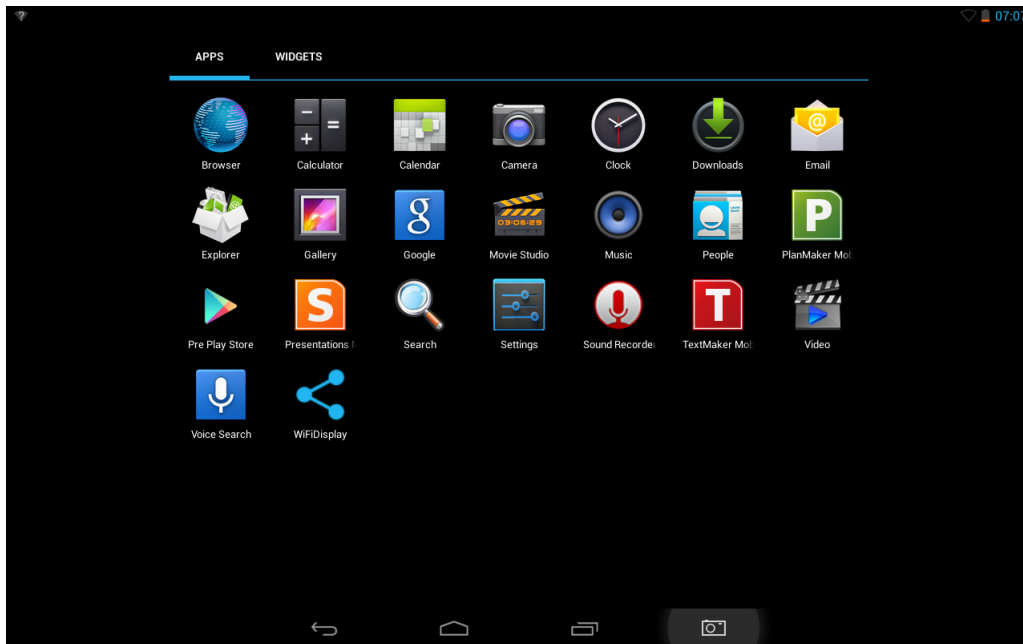

In the application menu interface, you can touch an application icon to open the application.


In applications with browsing capabilities, such as Explorer, Music, and Gallery, etc., you can drag the scroll bar up and down or flick the screen to scroll the file list.

In Browser or PDF reader, touch the page and drag it upward / downward to scroll the page (be careful not to touch the link!)

## 4. Basic Settings

 You can personalize applications, set the system date and time, configure the network connection, and change other device settings in the **Settings** page. To open the **Settings** page, do one of the following:

- Tap the Application  icon, then tap  Settings.

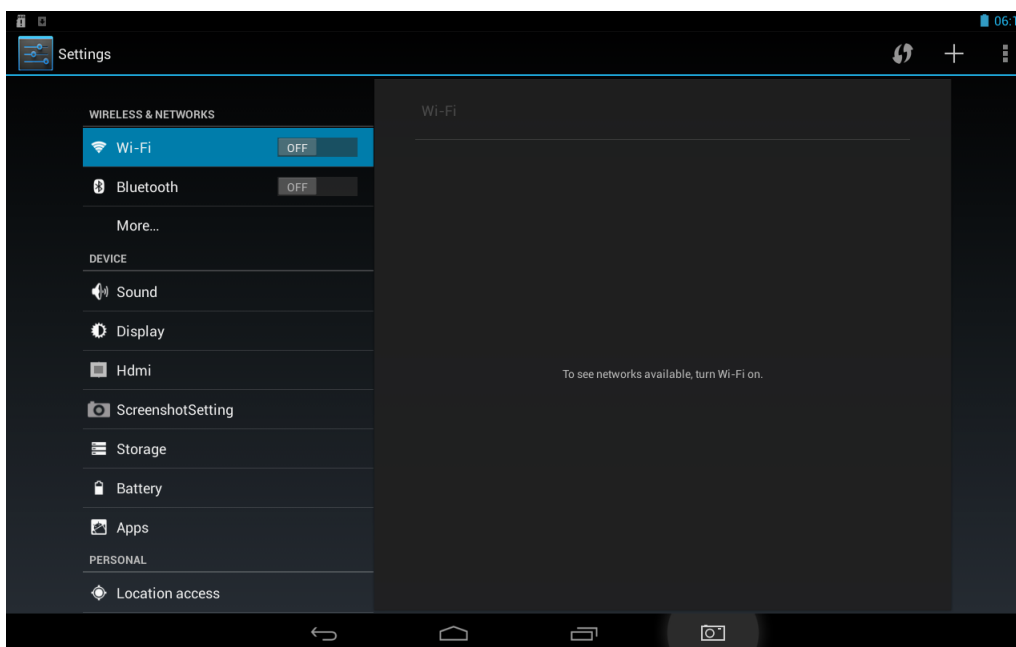


Tap an item on the left panel menu to display more function settings on the right panel.

### 4.1 Wi-Fi and Network
 
#### 4.1.1 Wi-Fi

The Wi-Fi menu allows you to manage the Wi-Fi settings and connect to a wireless network.

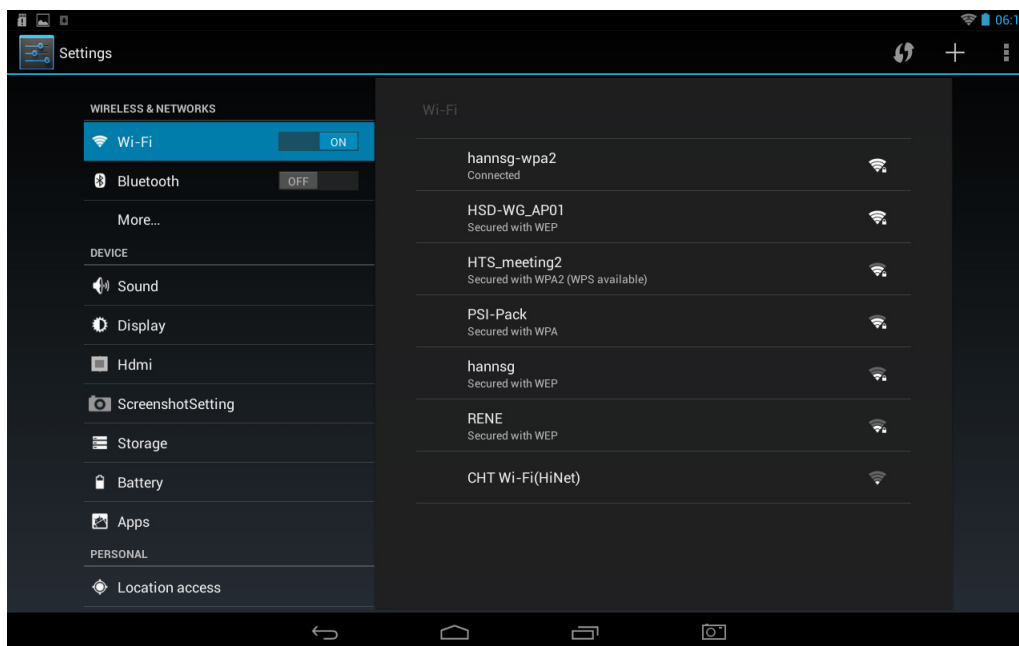

Tap the Wi-Fi switch button to turn Wi-Fi on or off.

- The Wi-Fi icon showing **OFF** indicates Wi-Fi is turned off.
- The Wi-Fi icon showing **ON** indicates Wi-Fi is turned on.


### Connect to an Access Point

 
1. Turn on Wi-Fi. The device searches for available networks within range and displays the searched Access Point (AP) names on the right panel.
2. Tap an access point name that you want to connect to. If the selected access point is protected by a password, the device will prompt for the password.

**NOTE:** The password entry is required only when connecting to the AP for the first time.

3. If prompted, enter the password to connect to the AP.
4. Tap **Connect**.

### Other Wi-Fi Options

Tap the **Advanced**  icon on the upper-right corner of the screen to display advanced options and other network information.

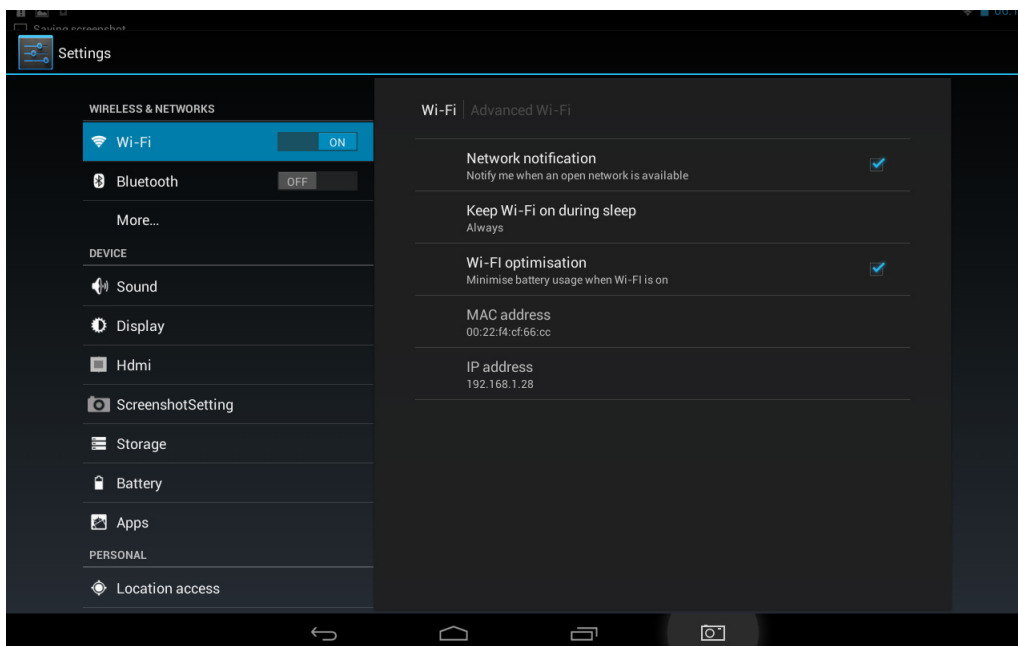

When the **Network notification** option is checked, the system automatically scans and displays available networks within range. If it is unchecked, you must tap **SCAN** to manually scan for nearby networks and tap **ADD NETWORK** to manually add a network.


**NOTE:** This tablet PC keeps track and recognizes Wi-Fi networks that have been connected before. Once Wi-Fi is turned on and a known connection is detected, the device automatically connects to that network.



## 4.2 Device

 
### 4.2.1 Sound

Set the tone and sound notifications.

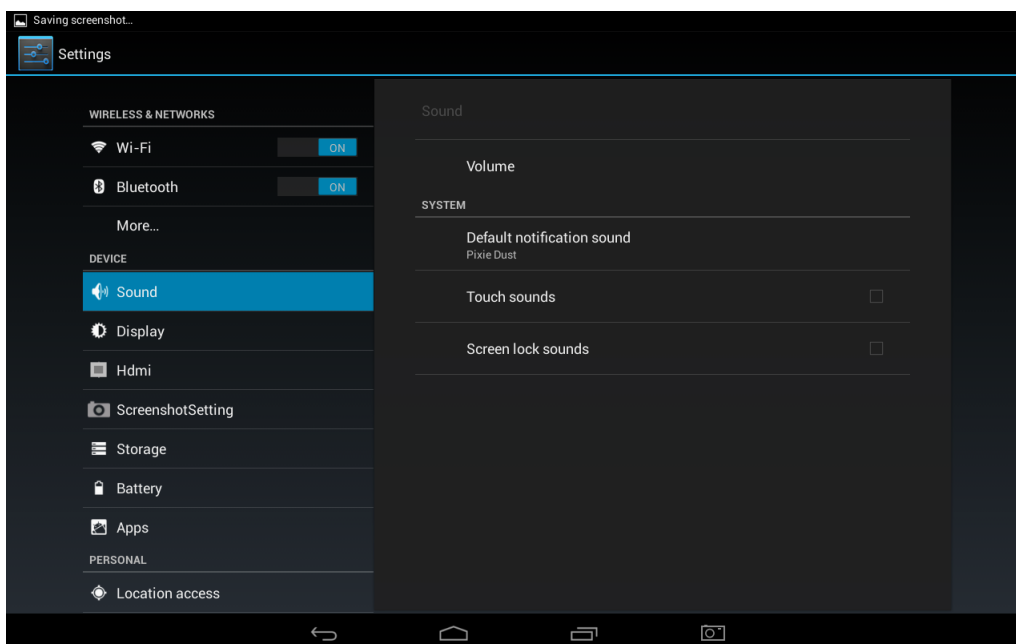

- **Volumes:** Includes volume adjustments for Music, Video, Games and other media, notifications and alarm clock. Drag the slider bar to adjust the corresponding volume.
- **Default notification:** Set the default notification ringtone.
- **Touch sounds:** Produce sound when you make selection on the screen.
- **Screen lock sound:** Produce sound when you unlock or lock the screen.


### 4.2.2 Display

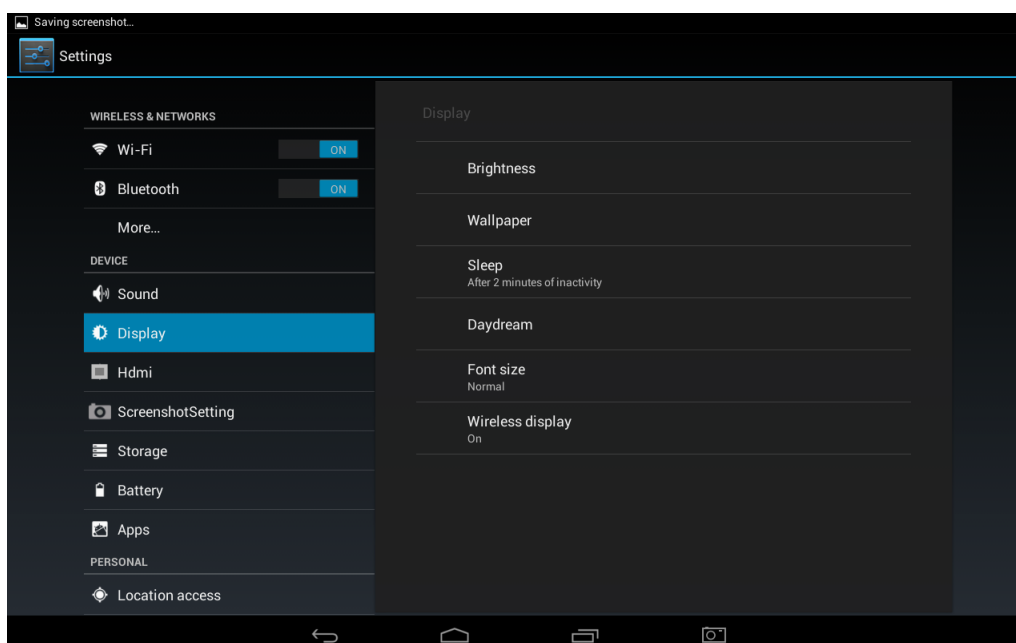 

- **Brightness:** Adjust the screen brightness. Drag the slider bar left or right and click **OK** to adjust brightness settings. You can also choose automatic adjustment.


- **Wallpaper:** Change the background of the home screen. Refer to **“Wallpapers” on page 11** for details.
- **Sleep:** Adjust delay before the screen automatically goes off.  
Eight available options: 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, 30 minutes, and never sleep.
- **Daydream:** Set the screensaver settings to let the screen display the chosen Daydream application when the device idle or docked.
- **Font size:** Set the size of the system font, there are four options : Small, Normal, Large, Huge.
- **Wireless display:** Set the setting to **ON** to enable the device automatically searches for nearby wireless displays.

### 4.2.3 HDMI

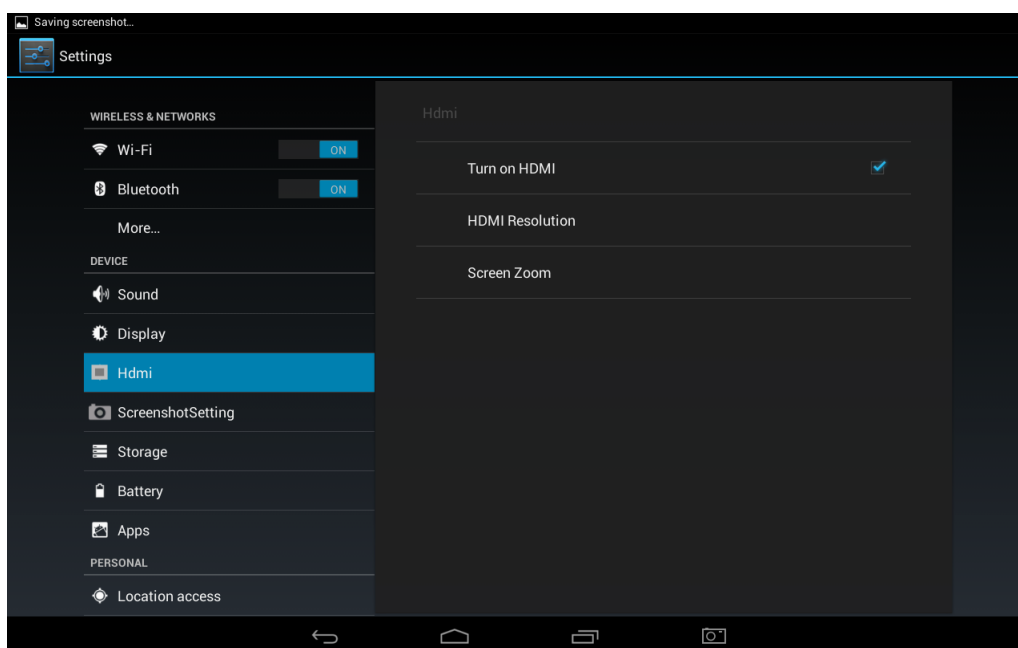 


- **Turn on HDMI:** When checked, the HDMI output function is enabled.
- **HDMI Resolution:** Set the HDMI output resolution.
- **Screen Zoom:** Set the HDMI output screen size.

## 4.2.4 ScreenshotSetting

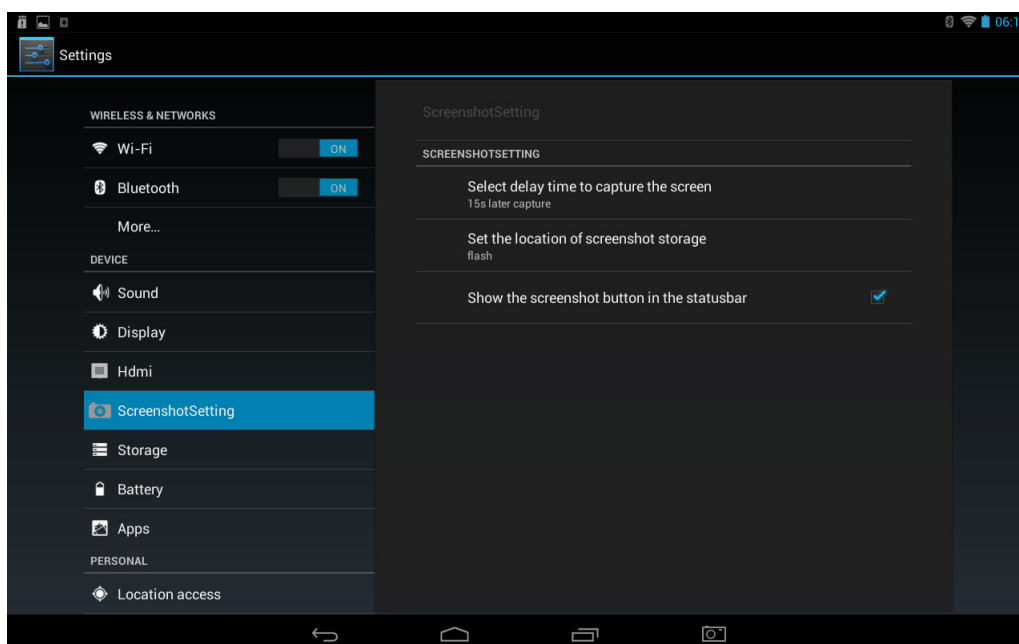 


- **Select delay time to capture the screen:** Select the delay time to capture the screen after tapping the screenshot button.
- **Set the location of screenshot storage:** Specify the location to store the captured screenshots.
- **Show the screenshot button in the statusbar:** When checked, the screenshot button is shown on the status bar.

## 4.2.5 Storage

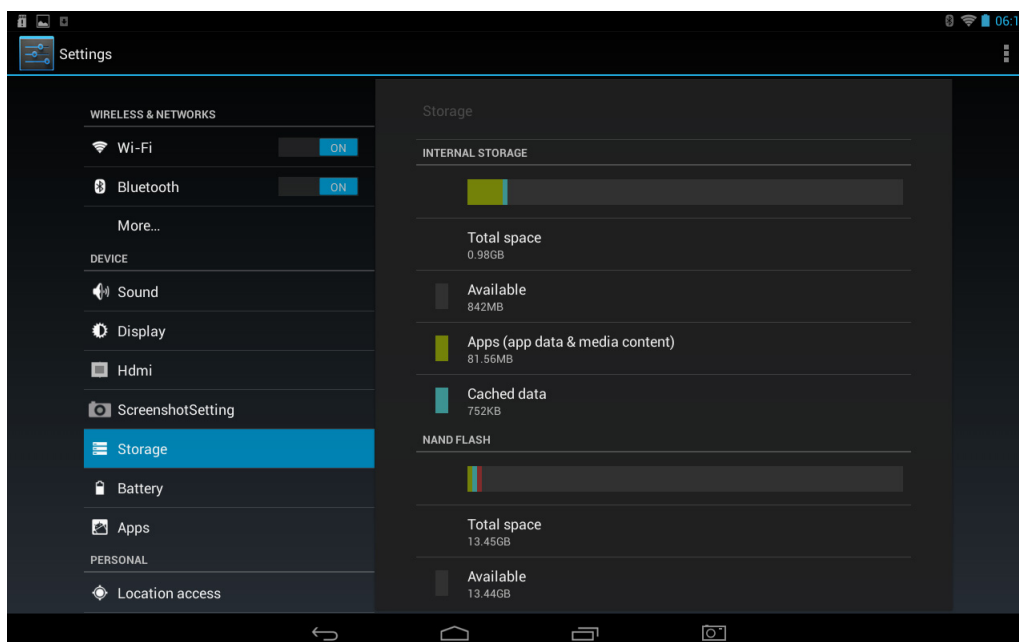 

Displays the storage status of the device, such as the total capacity, the space occupied by applications, images and videos, etc., including the SD card and USB storage capacity.

## 4.2.6 Battery

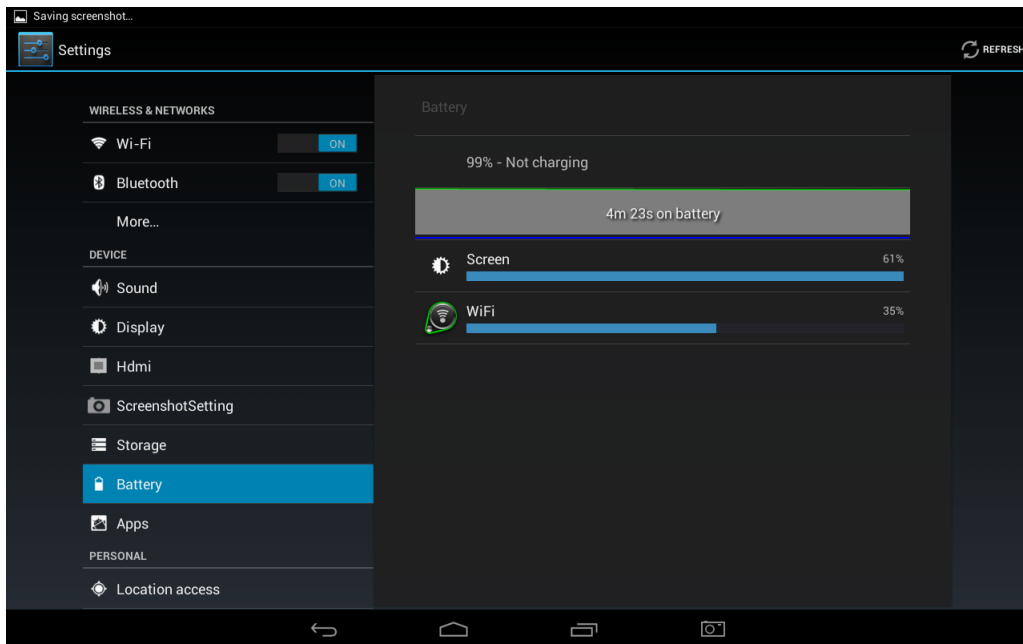 

Displays the battery status. Click the icon to see more details.

## 4.2.7 Apps



 
Displays the status of the applications in the device.

- **DOWNLOADED:** Lists applications installed by the user.
- **ON LOCAL DISK:** Lists applications in the SD card.
- **RUNNING:** Displays the running applications in the system.
- **ALL:** Lists all the applications in the device.

## 4.3 Personal

### 4.3.1 Location access


Set your location and allow interactive options with Google.

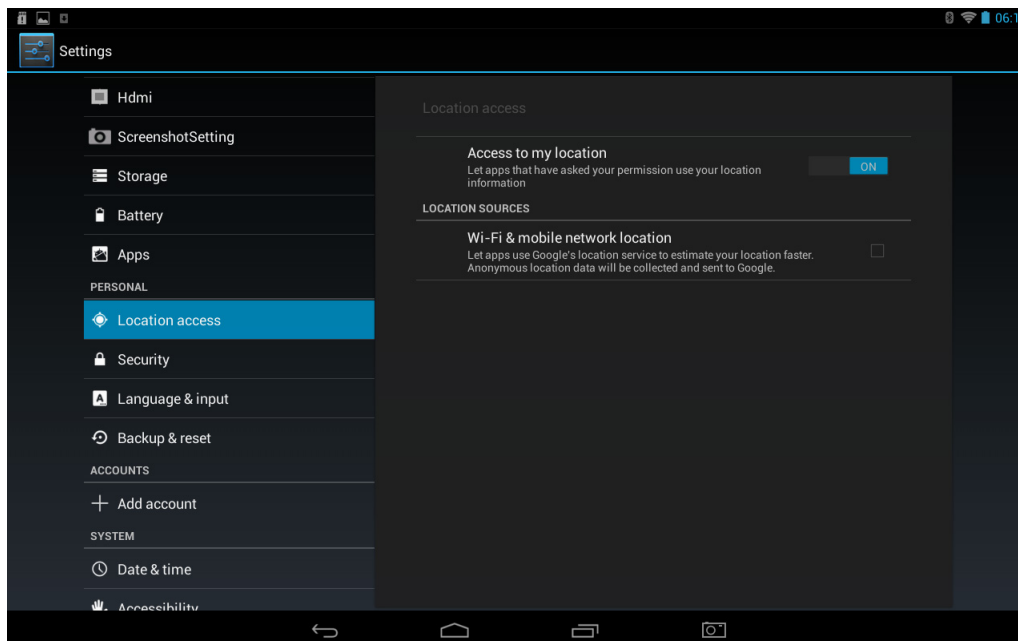

- **Access to my location:** Set the setting to **ON** to let applications request your permission before using your location information.
- **Wi-Fi & mobile network location:** When checked, applications let Google to use your location to improve search results and other services.

### 4.3.2 Security

 The Security menu allows you to set device security options.

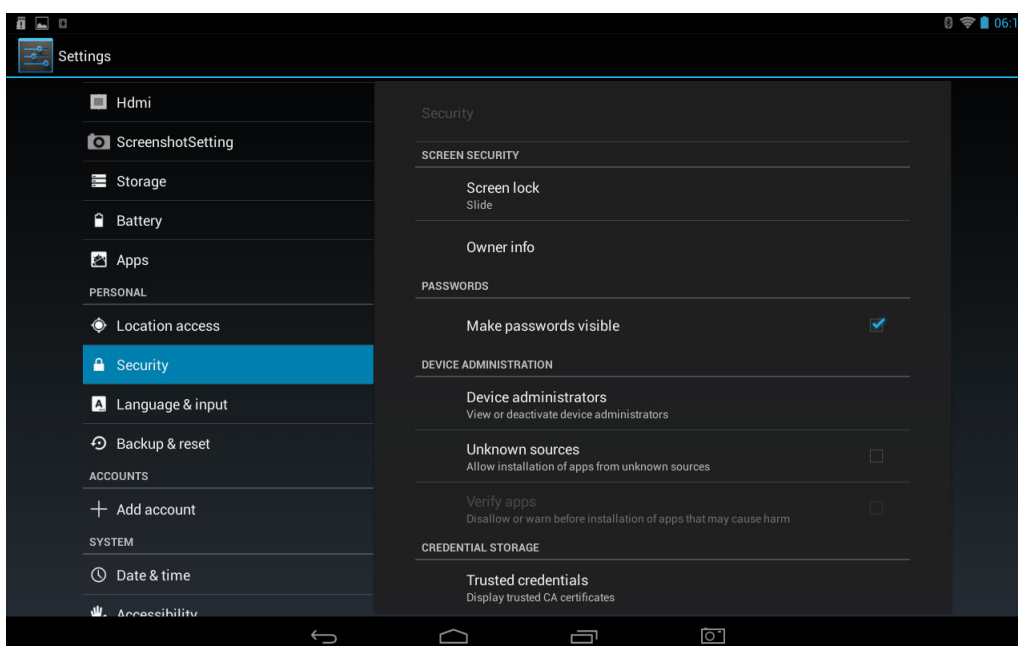

- **Screen lock:** Selects the method of unlocking the screen.
- **Owner info:** Displays the owner information on a locked screen.

- **Make passwords visible:** Check this option to display password characters as you type them on screen.
- **Device administrators:** Views or deactivates device administrators.
- **Unknown sources:** Runs and installs application programs not from Google market.
- **Verify apps:** Check this option to disallow or warn before installation of applications that may cause harm.


## CREDENTIAL STORAGE

 Ascertain the legality and credibility of the program with some credentials CA.

- **Trusted credentials:** Store trusted credentials used by the system or the user.
- **Install from SD card:** To import trusted credentials from the SD card.
- **Clear credentials:** Clear all the credentials recorded by the system, generally can't be chosen by default.


### 4.3.3 Language and input

This menu allows you to choose the system display language and input method.

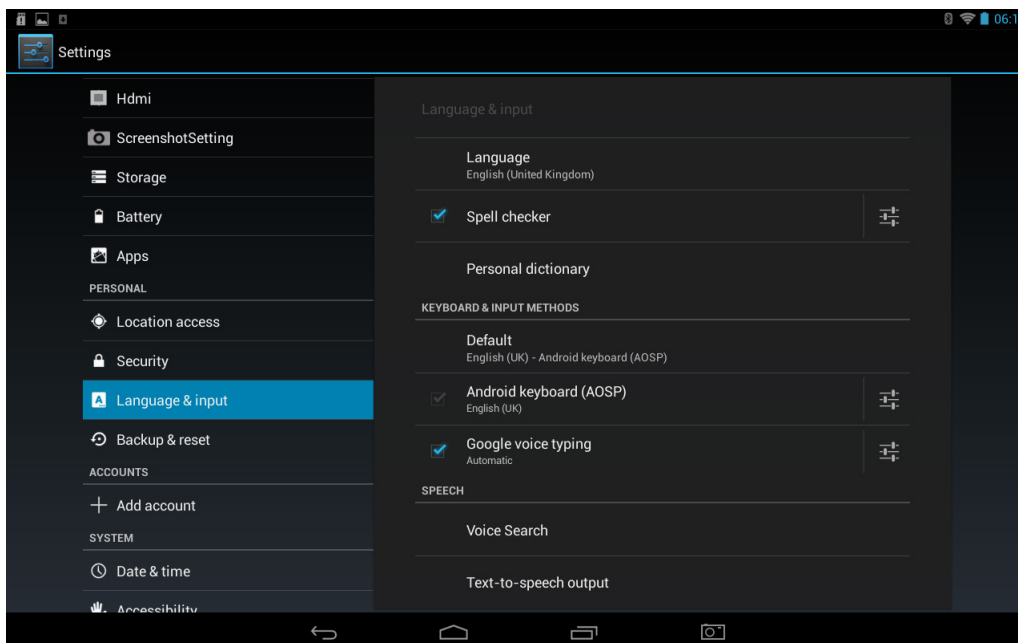

- **Language:** Choose the system language, with 60 options.
- **Spell checker:** The system assists to correct spelling mistakes according to the chosen language.
- **Personal dictionary:** Custom words defined by the user, null by default.


### 4.3.4 Backup & Reset

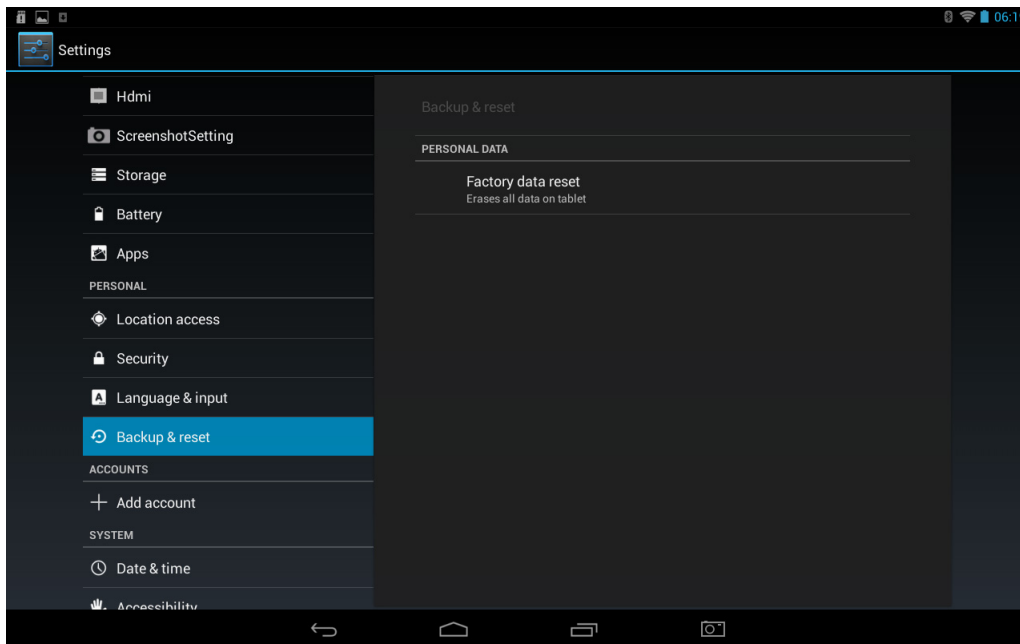 

- **Factory data reset:** Clear all the data in the tablet PC; generally used to restore the system when it goes wrong.

## 4.4 Accounts
 
### 4.4.1 Add account

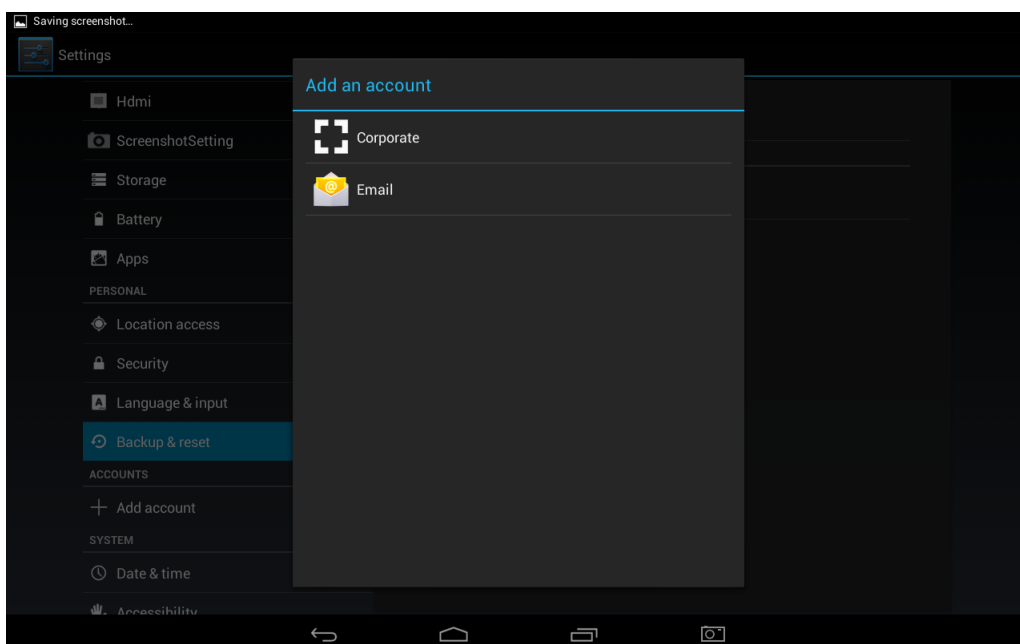


Touch **Add account** to add a new account.


## 4.5 System
 
### 4.5.1 Date and time

Set the date, time, time zone, and date format.

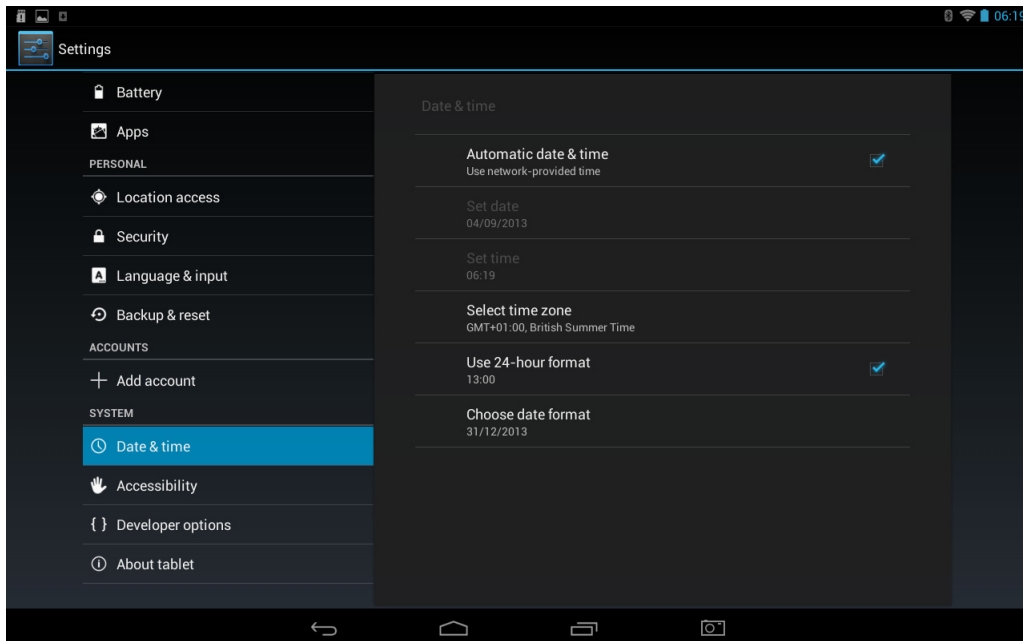


- **Automatic date & time:** Use the time on the network; it requires access to Internet, restart the device for the settings to take effect.
- **Set date:** Access to date setting interface and set the date.
- **Set time:** Access to time setting interface and set the time.
- **Select time zone:** Access to time zone setting interface and set time zone.
- **Use 24-hour format:** Set the display format of the time.
- **Choose date format:** Display the date by selecting different date format.

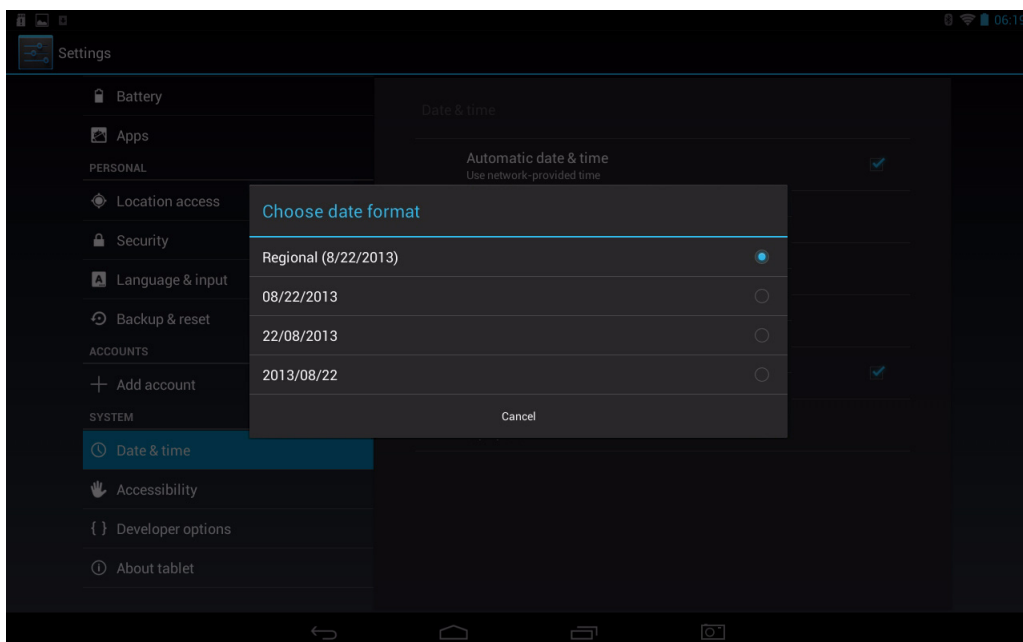 




## 4.5.2 Accessibility

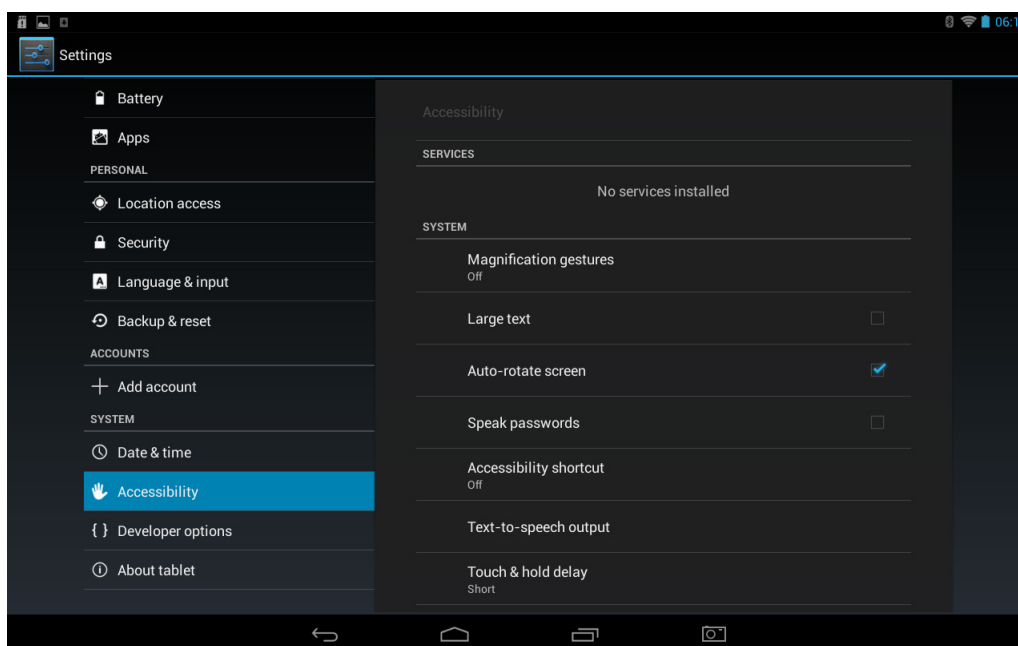 

### SYSTEM

- **Magnification gestures:** Set the setting to **ON** to enable the zoom in and out functions by tapping the screen 3 times.
- **Large text:** Check this option to use a large text as the system display font.
- **Auto-rotate screen:** Check this option to let the screen orientation change automatically when you rotate the tablet.
- **Speak passwords:** Check this option to allow users to say the passwords out loud instead of typing them.
- **Accessibility shortcut:** Set the setting to **ON** to enable quick access for activating the accessibility features.
- **Text-to-speech output:** Set the text-to-speech settings.
- **Touch & hold delay:** Set the response speed of the touch screen.
- **Enhance web accessibility:** Whether to install the script from Google or not for viewing the web conveniently.
 
### 4.5.3 Developer options

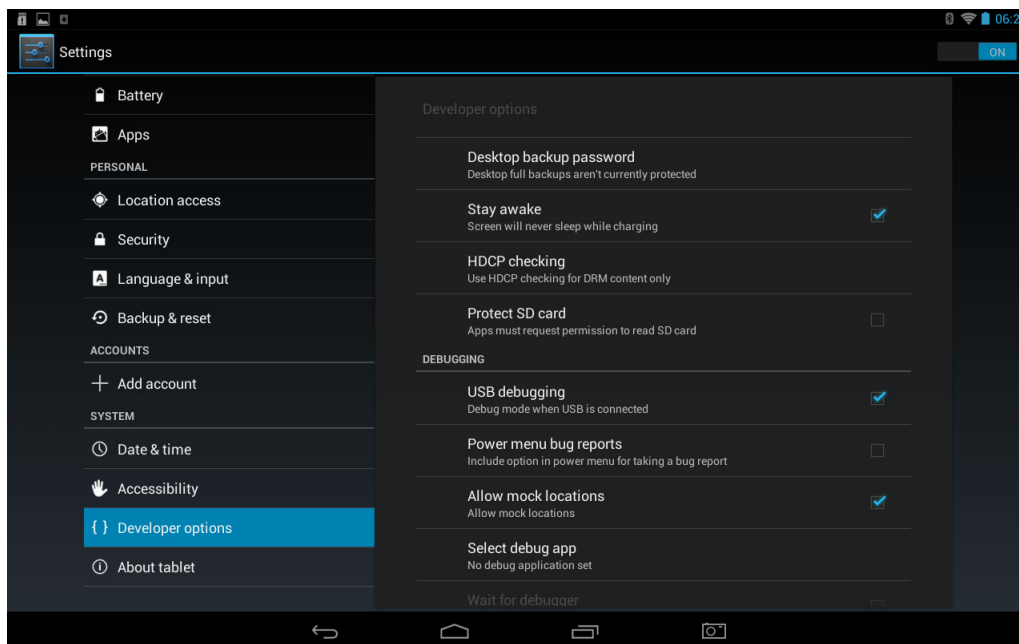

- **Desktop backup password:** Set backup password for desktop full backup.
- **Stay awake:** Check this option to let the screen stay awake when it is being charged in power-on status.
- **HDCP checking:** Use HDCP checking for DRM content only.
- **Protect SD card:** Check this option to let the application ask for permission before reading the memory card.

#### DEBUGGING

- **USB debugging:** Check this option to enable the system to copy data between computer and the device, installs application program on user's device without sending notice and read log data. This option is only applicable to development work.
- **Power menu bug reports:** Check this option to include option in power menu for taking a bug report.
- **Allow mock locations:** Position the user simulation site in the network map if it is on.
- **Select debug app:** Select the debug application.
- **Wait for debugger:** Check this option to let the debugged application wait for the debugger to attach before executing.
- **Verify apps over USB:** Check this option to check applications installed via ADB/ADT for harmful behaviour.

#### INPUT

- **Show touches:** Check this option to provide visual prompt for touch operation.
- **Pointer location:** Check this option to display the screen overlay that includes the current touch data.

#### DRAWING

- **Show layout bounds:** Check this option to show click bounds, margin, etc.
- **Show GPU view updates:** Check this option to let the views inside windows flash when being drawn with the GPU.

- **Show hardware layers updates:** Check this option to let the hardware layers flash green when it is being updated.
- **Show GPU overdraw:** Check this option to show GPU overdraw status. The status is indicated by color: blue -> green -> light red -> red (from best to worst).
- **Show surface updates:** Check this option to let the entire window surfaces flash when being updated.
- **Window animation scale:** Set the window animation scale ratio.
- **Transition animation scale:** Set the transition animation scale ratio.
- **Animator duration:** Set the animation duration scale ratio.
- **Disable HW overlays:** Check this option to always use GPU for screen compositing.
- **Force GPU rendering:** Check this option to force use of GPU for 2D drawing.
- **Force 4x MSAA:** Check this option to enable 4x MSAA in OpenGL ES 2.0 applications.
- **Simulate secondary displays:** Select the the simulation for secondary displays.

 
## MONITORING

- **Strict mode enabled:** Check this option to enable the screen flashes when the main thread operating lasts for a long time.
- **Show CPU usage:** Check this option to display the screen overlay that includes the current CPU usage.
- **Profile GPU rendering:** Check this option to measure rendering time in adb shell dumpsys gfxinfo.
- **Enable OpenGL traces:** Select the application for OpenGL traces.
- **Enable traces:** Select the categories of processes to be traced.

## APPS

- **Don't keep activities:** Check this option to destroy each activity after the user leaving.
- **Background process limit:** Set the background process limit.
- **Show all ANRs:** Check this option to display "Application no response" dialog box for background applications.

## 4.5.4 About Tablet

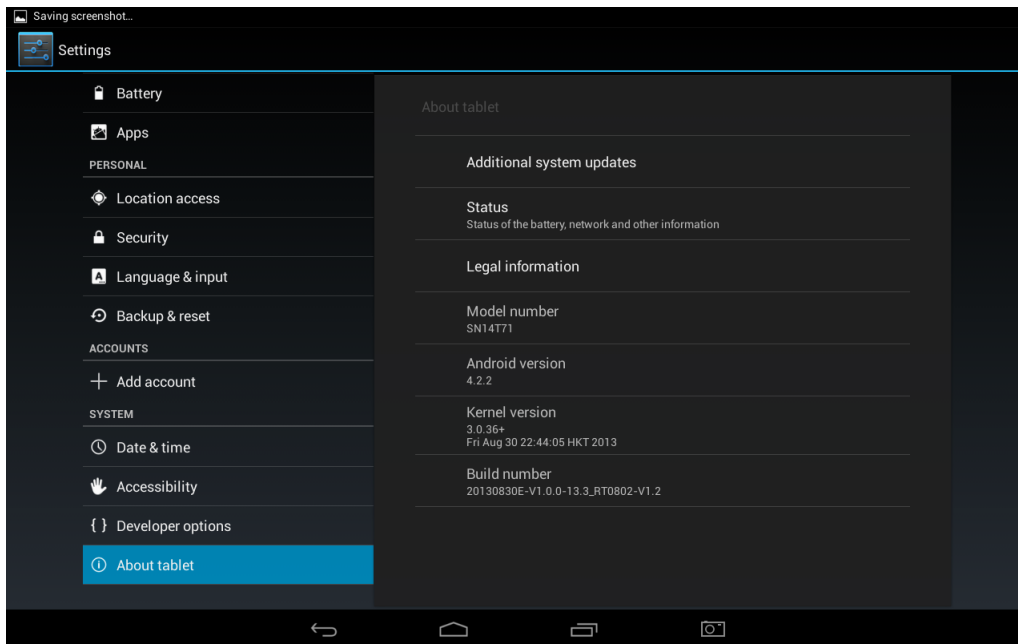

- **Additional system updates:** Detect the system version and upgrade.
- **Status:** View the status of tablet PC, including battery power, network, and other information.
- **Legal information:** View Open source licenses.
- **Model number:** Display the device model number.
- **Android version:** Display the version number of Android.
- **Kernel version:** Display the version number of Linux core.
- **Build number:** Display the customized version number, used for distinguishing the system software.

## 5. System Firmware Update

Android devices automatically receive over-the-air (OTA) updates whenever the manufacturer of the tablet rolls out official updates.

Usually users check for updates by heading to **Settings > About tablet > Additional system updates**.

## 6. Product Specifications

Platform	Operating System	Android 4.2.2
	Processor	1.6 GHz, Quad Core A9
	Memory	1GB DDR3
Storage	Storage	NAND FLASH 16GB (Default) on main board , 32GB max.
Display	Brightness	LCD Panel with LED backlight, 235 cd/m <sup>2</sup> (min.), 275 cd/m <sup>2</sup> (typ.)
	Resolution	13.3 inch, 1280x800
Touch screen	Principle	Capacitive type
	Sensor (points)	Multi touch (Supported 10 points)
Communications	WLAN	WLAN (802.11 b/g/n)
	Bluetooth	BT3.0
	Camera	Front camera: 0.3M pixel Rear camera: 2.0M pixel
Sensor	3 axis Accelerometer	Yes, Supported x/y/z axis and +/- direction
	G Sensor	Yes, resolution: 10 bits
I/O Port	DC power port	DC Jack in x1
	Headphones	3.5mm x1
	Microphone	Built-in
	USB 2.0	Micro USB 2.0 x1 (OTG), Micro USB 2.0 x1, Supported USB K/B, Mouse, USB flash disk
	Card reader	Micro SD x1, Max. supported 32GB
	HDMI output(1.4)	mini HDMI (include HDCP) x1
	Speakers output spec.	8ohm, 1.5W x2
HW button	Power	Yes
	Volume	Yes
LED Indicator		Yes
Adaptor		AC 100V~240V, DC 9V 2.5A (L type DC plug)
Dimension	Dimension(W*D*H mm)	325 x 12.5 x 228mm

# 7. Troubleshooting

## 7.1 Resetting your device to Factory Defaults

If you need to reset your device to the factory default settings for any reason please follow the process below:

### **WARNING!!!**

Please be aware any information currently on the device will be permanently erased by following this procedure.

1. Go to applications screen and touch the settings button.
2. Touch the **Backup & Reset** option.
3. Select **Factory data reset**.
4. Leave the erase SD card option unticked and touch **Reset tablet**.
5. Touch **erase everything**.
6. The unit will now reset itself back to factory reset and any previous information/data will have been permanently erased.

## 7.2 How to reset the tablet

Unwrap a paper clip and insert the end into the opening for the **Reset** button where it's located on the right side of your tablet's back cover until the screen goes dark. Then press the **Power** button to power on.

## 7.3 Getting further help and support

Please see our support site below for further help and support with your device including how to install software updates if available and much more:

<http://www.hannspree.com/>

**NOTE:** Some of the applications downloaded from **Play Store** or produced by other third party are not fully supported on this device.